

Demisting-Defrosting	
Rearscreen	64
Windscreen and side windows	75-78
Wing mirrors	65
Diesel filter	
Replacing cartridge	171
Water purge	171
Differential	187
Dimensions	195
Dipped-beam headlights	
Bulb replacement	132
Switching on	61
Direction indicators	
Changing front bulbs	133
Changing rear bulbs	135
Changing side bulbs	133
Control lever	20-61
Switching on	61
Warning lights	70
Door closing indicator	66
Door locking remote control	
Alarm system	13-32
Door opening-closing	15-36
Door Opening-Closing remote control	15-36

Doors	
Central locking	39
Closing indicator	66
Closing/opening from inside	18-39
Closing/opening from outside	18-38
Remote control	15-36
Dust/pollen filter	
Checking	172
Description	80

E conomy and environment-friendly driving	117
Electric system	
Technical specifications	192
Electronic alarm	13-32
Activating	13-33
Deactivating	14-35
Interrupting the alarm	35
Electronic control units	175
Emergency starting (engine inhibitor) (flat battery)	31 146

Emission reducing devices	
Diesel engines	102-119
Petrol engines	102-119
Engine	
Bonnet opening	25-92
Fuel supply-ignition	186
Identification code	183
Technical specifications	184
Valve gear timing	185
Engine compartment	25-92
Engine coolant fluid	
Checking level and topping up	166
Temperature gauge and warning light	65
Engine cooling	
Checking fluid level and topping up	166
Coolant temperature gauge	65
Maximum temperature warning light	66
Engine cooling system	196
Engine inhibitor (Alfa Romeo CODE)	11-28

208

Engine oil	
Checking level	161
Consumption	196
Filter	164
Replacement	163
Topping up	162
Engine oil consumption	196
Engine oil dipstick	161
Engine oil filter	
Replacement	164
Engine oil pressure (warning light)	67
Engine starting	104
Engine stopping	106
Environmental protection	101
Exhaust gas recirculation system	102
Exterior rearview mirrors	17-45
F irst aid kit	150
Foglights	
Aiming	95
Bulb replacement	134
Switching on	23-82

Front roof light	
Bulb replacement	137
Description	86
Front seat adjustment	19-40
Front seat warming	41
Front seats	
Adjustments	19-40
Electric heating	41
Headrest	41
Seat pockets	41
Fuel	
Additive (Diesel versions)	100
Consumption	198
Cut-off switch	83
Level gauge and reserve warning light	66
Refuelling	26-100
Technical specifications	196
Fuel cap	101
Fuel consumption	198
Fuel cut-off	83
Fuel cut-off switch	83

Fuel filter (1.9 JTD version)	
Cartridge replacement	171
Water purge	171
Fuel flap	26-100
Fuel flap opening	26-100
Fuel level gauge	66
Fuel oil	
Additive	100
Consumption	190
Cut-off switch	84
Level gauge and reserve warning light	65
Refuelling	26-100
Fuel oil filter water purging (1.9 JTD version)	171
Fuel reserve	196
Fuel supply-ignition	186
Fuel tank	196
Fuses and relays	
Fuses and relays near the injection control unit (1.9 JTD version)	140
Fuses in control unit	141

Fuses and relays	
Fuses on auxiliary bracket	141
General protection fuses	140
List of protected devices	144-145
Relays in engine compartment	142

Gearbox

Checking the level and changing the oil	165
Gearshift lever	84
Specifications	187

Gearbox and differential oil	165
------------------------------	-----

Gearshift lever	84
-----------------	----

Getting the best out of your car

	103
--	-----

Getting to know your car	27
--------------------------	----

Glovebox	85
----------	----

Grab handles	85
--------------	----

Hand brake

Lever	84
Warning light	67

Hazard warning lights	
Switching on	22-82

Headlamp aiming	84
-----------------	----

Headlamp aiming device	84
------------------------	----

Headlamp washer	64-177
-----------------	--------

Headlamps

Aiming device	84
Bulb replacement	130
Electric adjustment	94
Manual adjustment	93

Headrest

Front	41
Rear	43

Heating and climate control	23-71
-----------------------------	-------

Heating and ventilation	23-73
-------------------------	-------

Heating and ventilation controls	23-73
----------------------------------	-------

High beam flasher	61
-------------------	----

High beam headlamps

Changing bulbs	132
Switching on	61

Horn	10
------	----

Identification data	182
---------------------	-----

If an accident occurs	149
-----------------------	-----

If one of the external light goes out	130
---------------------------------------	-----

If one of the internal light goes out	137
---------------------------------------	-----

If the vehicle is to be lifted	147
--------------------------------	-----

If the vehicle is to be towed	148
-------------------------------	-----

Ignition switch	15-37
-----------------	-------

Ignition switch and steering lock	15-37
-----------------------------------	-------

In an emergency

In the event of a burnt fuse or relay	139
---------------------------------------	-----

In the event of a flat battery	146
--------------------------------	-----

In the event of a puncture	126
----------------------------	-----

Instrument cluster	21-65
--------------------	-------

Instruments panel	21-65
-------------------	-------

Interior lighting

Boot lighting	91
Front lighting	86

Interior rearview mirrors	17-44
---------------------------	-------

210

Jack

Use	128
Warnings	126

Keys

Alarm system deactivation key	11-14-28-35
-------------------------------	-------------

Key

Ignition key	11-28
Sunroof emergency operation key	90

Lambda sensor	102
---------------	-----

Levers at steering wheel	20-60
--------------------------	-------

Lifting jack

Use	128
Warnings	126

Load on vehicle roof	205
----------------------	-----

Locks

Boot	24-90
Doors	18-38
Glovebox	85

Low beam headlights

Changing bulbs	132
Switching on	61

Luggage compartment	24-90
---------------------	-------

Main beam headlights

Bulb replacement	132
Switching on	61

Maintenance

Additional operations	156
Generalities	153
Precautions	152
Scheduled Maintenance	152
Scheduled Maintenance Programme	154

Maintenance operations (additional)	156
-------------------------------------	-----

Manual climate control	73
------------------------	----

Maximum permissible speed	193
---------------------------	-----

Mileage recorder	65
------------------	----

Number plate lights

Bulb replacement	136
------------------	-----

Parking	107
---------	-----

Petrol

Consumption	198
-------------	-----

Petrol

Level gauge	66
Refuelling	26-100
Reserve warning light	66
Specifications	196

Power steering

Checking level and topping up	167
Practical advice	112

Power steering oil

Checking the level and topping up	167
-----------------------------------	-----

Power windows	22-46
---------------	-------

Programmed Maintenance

Schedule	154
----------	-----

Protective shield under engine	161
--------------------------------	-----

Radio and cellphone transmitters

	123
--	-----

Radio system	200
--------------	-----

Ready to go

	9
--	---

Rear fog guards

Bulb replacement	135
Switching on	23-62

211

Rear seat		Safe driving	107	Service station	26-100
Headrest	43	Anti wheel-lock system	111	Services warning lights	67
Tilting	42	At night	109	Servicing	
Rearscreen heating	64	Before a journey	107	Specifications	26-100
Rearscreen wiper	63	Brakes	110	Technical specifications	196
Replacement	176	In adverse weather	109	Servobrake	111
Rear-view mirror adjustment	17-44	In the mountains	110	Sidelights	
Recommended fluids and lubricants	197	In winter	110	Bulb replacement front	132
Relays		Power steering	112	Bulb replacement rear	135
In engine compartment	142	Servo-brake	111	Switching on	60
In the control unit	141	Travelling	108	Snow chains	116
Near the injection control unit (1.9 JTD version)	140	Wheels	113	Sound system	97
On auxiliary bracket	142	Windows	113	Sound and system compartment	98
Replacing remote control batteries	32	Windscreen wiper blades	112	Spark plugs	175-186
Rev counter	65	Safeguarding emission reducing devices	119	Speakers	99
Reversing lights		Safeguarding the environment	101	Speedometer	65
Bulb replacement	135	Seat belt pretensioner	55	Spot light	
Roof bar coupling	205	Seat belts		Bulb replacement	137
Roof rack	205	Centre rear belt	19-49	Spray jets/headlamp washer	63-177
Running economy	117	Front and rear side belts	19-47		
		General notes on use	50		
		Pretensioners	55		
		Rear belts	49		
		Securing the load	91		

212

Starting the engine	104	Technical specifications	181	U nderbody protection	177
Diesel engines	105	Telepass (provision)	87	Useful accessories	124
Ignition device	15-37	Telephone (provision)	88-204	V alve gear timing	185
Petrol engines	104	Third stop light	136	Vehicle identification	182
Starting with an auxiliary battery	146	Tool container	128	Vehicle inactivity	122
Steering		Towing the car	148	Vehicle weight	187
Steering wheel adjustment lever	18-44	Towing trailers	201	Ventilation	75
Technical specifications	189	Tow hook	148-201	Volumetric protection	35
Steering lock	16-38	Tow rings	148-201	W arning lights	66
Steering wheel adjustment	18-44	Transmission	187	Washing the car	
Stop lights		Transmission ratios	187	Engine bay	179
Bulb replacement	135	Trip meter reset	64	Exterior	178
Style of driving	118	Tyre pressure	115-190	Interior	179
Sunroof		Tyres		Weights	194
Emergency operation	89	Inflation pressure	115-190	Wheel anti-lock system (ABS)	
Opening-Closing	16-88	Practical advice	113	Operation	95
Raising rear	89	Replacement	126	Practical advice	111
Sun visors	87	Snow chains	116	Wheel centering pin	129
Suspension	188	Types of tyres and wheel rims	190		
Switched off lights	60	Wear	114-115		
Symbols	4				

Wheel changing	127	Windscreen/headlamp washer fluid	
Wheel geometry	189	Checking level and	
Wheel rims	113-190	topping up	169
Wheels		Wing mirror folding	45
Balancing	116		
Practical advice	113		
Replacement	127		
Snow chains	116		
Tyre inflation pressure	115-190		
Tyres and rims	113-114-190		
Windows			
Cleaning	179		
Precautions	113		
Windscreen washer			
Checking fluid level and			
topping up	169		
Operation	63		
Windscreen wiper	62		
Blade replacement	176		
Speed selection	63		
Windscreen wiper blades			
Blade replacement	176		
Practical advice	112		